

Recovery Options

There are two

options to recover

the software to

your hard drive.

Emergency

Recovery DVD

contains copies of

all the software

originally installed

on your computer.

Before you do a

System Recovery, Non-

Destructive System

Recovery first, you

may be able to "Roll-

back" without needing

to reinstall software.

Option 1

Non-Destructive System Recovery

Non-Destructive System Recovery will recover the original software to your hard drive without formatting it first. This process preserves data files on your hard drive but requires you to reinstall any software not originally on the hard drive.

on your computer.

Before you do a

System Recovery, Non-

Destructive System

Recovery first, you

may be able to "Roll-

back" without needing

to reinstall software.

Option 2

System Recovery Quick Format

System Recovery Quick Format will first format your hard drive and all data on the drive will be lost. Again all software not originally on the hard drive must be reinstalled.

on your computer.

Before you do a

System Recovery, Non-

Destructive System

Recovery first, you

may be able to "Roll-

back" without needing

to reinstall software.

Figure A


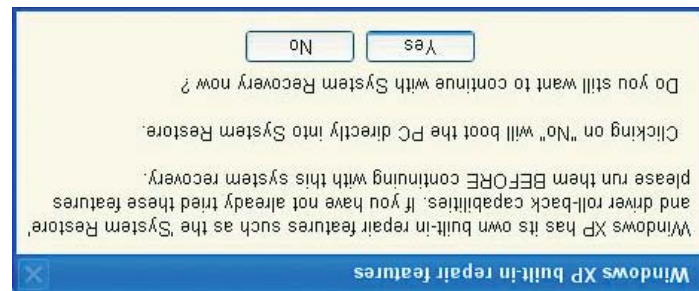 


Figure B

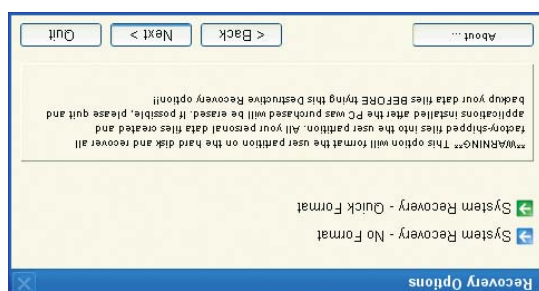 

Steps for Option 2, System Recovery Quick Format

1. Turn on your computer.
 2. Quickly insert Emergency Recovery DVD into the DVD drive before the computer begins to boot from the floppy or hard drive.
 3. The system will boot to a text message "System Recovery. Press 'R' to display System Recovery Options."
 4. The recovery process defaults to "Non-Destructive System Recovery-Quick Format" instead, to perform "System Recovery-Quick Format" press the "Advanced Options" button at the left to continue.
 5. On the following screen see that "System Recovery-No Format" is pre-selected (green arrow) and you must click on "System Recovery-Quick Format" to begin the process.
 6. The following screen explains that Windows XP has an option to repair itself by going back to a point where the operating system was working properly. (Figure A)
- Press the "Next" button to continue. (Figure B)
- Warning: If you choose to continue this option, often any data on the hard drive and restore software settings as shipped from the factory.
- On the following screen see that "System Recovery-No Format" is pre-selected (green arrow) and you must click on "System Recovery-Quick Format" to begin the process.
 7. The system will boot to a text message "System Recovery. Press 'R' to display System Recovery Options."
 8. The next screen displays the status of the format process.
 9. The next screen displays the status of the recovery process.
 10. When the recovery is complete, press the "Restart" button to reboot the system. When the system starts to reboot, remove the DVD from the drive.

This is the FINAL WARNING that all data on the hard drive will be lost if you continue past this point. To continue and format the hard drive press the "Yes" button.

7. The system will boot to a text message "System Recovery-Quick Format" press "Yes" button.

This is the FINAL WARNING that all data on the hard drive will be lost if you continue past this point. To continue and format the hard drive press the "Yes" button.

8. The next screen displays the status of the format process.

9. The next screen displays the status of the recovery process.

10. When the recovery is complete, press the "Restart" button to reboot the system. When the system starts to reboot, remove the DVD from the drive.

Steps for Option 1, Non-Destructive System Recovery

1. Turn on your computer.
 2. Quickly insert Emergency Recovery DVD into the DVD drive before the computer begins to boot from the floppy or hard drive.
 3. The system will boot to a text message "System Recovery. Press 'R' to display System Recovery Options."
 4. The recovery process defaults to "Non-Destructive System Recovery" if this is what you want, press the "Next" button to continue.
 5. The following screen explains that Windows XP has an option to repair itself by going back to a point where the operating system was working properly.
- Press the "Next" button to continue.
- Warning: If you choose to continue this option, often any data on the hard drive and restore software settings as shipped from the factory.
- On the following screen see that "System Recovery-No Format" is pre-selected (green arrow) and you must click on "System Recovery-Quick Format" to begin the process.
 7. When the recovery is complete, press the "Restart" button to reboot the system. When the system starts to reboot, remove the DVD from the drive.
 6. The next screen displays the status of the recovery process.
 7. When the recovery is complete, press the "Restart" button to reboot the system. When the system starts to reboot, remove the DVD from the drive.

This is an option that works well with drivers or other software programs that may have caused instability in the operation of Windows, for more information see the Windows Help file.

8. The next screen displays the status of the format process.

9. The next screen displays the status of the recovery process.

10. When the recovery is complete, press the "Restart" button to reboot the system. When the system starts to reboot, remove the DVD from the drive.

What is the model number of my WinBook notebook computer?

 
There are two methods for determining the exact model of WinBook that you have purchased.

The first method is to turn the notebook over and view the label on the bottom of the unit.



The model number is composed of the first 4 digits of the unit serial number. (Example: A700XXXXXXX)

The second method is to view the General System Properties dialog box within Windows. To access the system properties window perform the following steps:

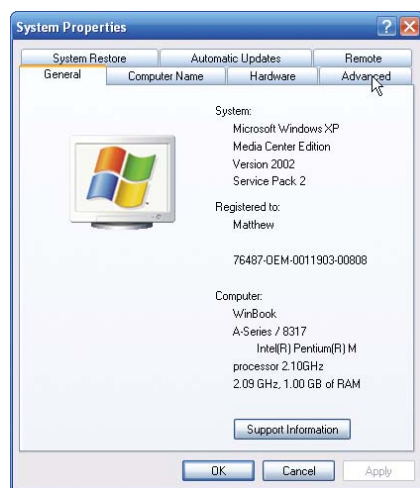

1. "Left click" on the Start Menu button found in the lower left hand corner of the display.
2. "Right click" on the My Computer icon to bring up an action list, then "left click" on properties to open up the General System Properties window.
3. The series designator is located to the right of the WinBook logo.

Limited Warranty

WinBook Corporation, ("WinBook"), warrants to you, the original purchaser, that this WinBook (the "Product") will be free from defects in materials and workmanship for a period of three full months from the original date of purchase. Should the Product fail to conform with this warranty during the warranty period, WinBook will repair the Product at no charge.

You may extend the warranty period for an additional nine months at no charge by registering the Product at www.winbook.com/registration and completing the registration form on-line.

Exclusions

This Limited Warranty does not cover software, batteries, disks or related documentation. WinBook will not be liable for alteration or loss of software programs, operating systems, or data stored on equipment sent in for repair or upgrade. The Purchaser is advised to back up all data prior to any servicing of the Product.

Items attached to or installed in the WinBook Computer will be removed at the Technician's discretion prior to service. WinBook is not responsible for repairs or testing of non-covered items.

This Limited Warranty covers normal use. Preventive maintenance is not included. WinBook does not warrant and will not be held responsible in any way for damages or loss resulting from a cause other than defects in materials or workmanship, including damage or loss caused by: neglect, accident, unreasonable use, servicing or modification by anyone other than WinBook or its designee; transit of equipment to WinBook for service, return or evaluation; any natural disaster, including flood, fire, earthquake, or lightning; or electrical surges or use of improper power sources.

WinBook's liability under this Limited Warranty shall be limited solely to repair as provided for above, and WinBook assumes no risk of, and shall not in any case be liable for, any other damages, including, without limitation, any special, incidental, consequential or punitive damages, arising from breach of warranty or contract, negligence or any other legal theory, including, without limitation, loss of goodwill, profits or revenue, loss of use of the Product or any associated equipment, cost of capital, cost of any substitute equipment, facilities or services, downtime costs, or claims of any party dealing with the Purchaser for such damages.

The employees and agents of WinBook are not authorized to make modifications to warranties, or additional warranties binding on WinBook; accordingly, additional statements, whether oral or written, do not constitute warranties and should not be relied upon by the Purchaser.

The warranties set forth in this warranty statement allocate the risks of Product failure between seller and buyer as authorized by the Uniform Commercial Code and other applicable law. WinBook's Product pricing reflects the allocation risk and the limitations of liability contained in this statement.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ALL WARRANTIES, OTHER THAN WARRANTY OF TITLE, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED, INCLUDING THE WARRANTIES OR MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR PURPOSE.

Some states do not allow limitations on how long an implied warranty lasts or do not allow the exclusion or limitation of incidental or consequential damages, so any such limitation or exclusion may not apply to you. This warranty gives you specific legal rights. You also have other rights which may vary from state to state.

To obtain Service under this Agreement

To obtain service under this Limited Warranty merchandise must be received within three months of purchase and be accompanied by proof of purchase. If you ship the unit to WinBook for service, WinBook will not be responsible for shipping charges, loss or damage in transit, shipping containers or packing supplies. You are responsible for all shipping materials should the original packing materials not be available. The customer must call WinBook Technical Support and obtain an RMA number before the unit can be sent to WinBook.

For Tech Support, please contact WinBook at (800) 722-4396.
For Customer Support, please contact WinBook at (800) 772-7817.

Your WinBook system contains a special Linux partition for running the PowerCinema instant-on multimedia apps. You can recover your Windows system files (using the WinBook Recovery DVD) without affecting this special partition. If this partition becomes damaged or inoperable, call WinBook tech support for assistance or go to www.winbookcorp.com.

- > Quickstart Guide
- > Recovery Options
- > Warranty Information (on the back)

Quickstart Guide

Congratulations and thank you for purchasing your WinBook notebook.

Follow these easy step-by-step instructions for quick installation of your notebook.

WinBook[®]
Critically Proven.



Read First

Don't attempt to install any additional hardware into your new system until your system has been turned on for the first time and the setup process has been completed.

1 Prepare your work space

 


- Don't place your computer near a sunlit window. Excessive heat will shorten the life of a computer.
- Don't use your computer in areas of excessive dust, humidity or temperature.

2 Install the battery

The battery should be installed before starting your notebook for the first time. Remove the battery pack from the accessories box and install it into the system by following these instructions:


- Carefully turn the unit upside down.
- Line up the battery for insertion into the battery bay channel.
- Gently slide the battery towards the center of the unit until an audible click indicates that the latches have been secured.

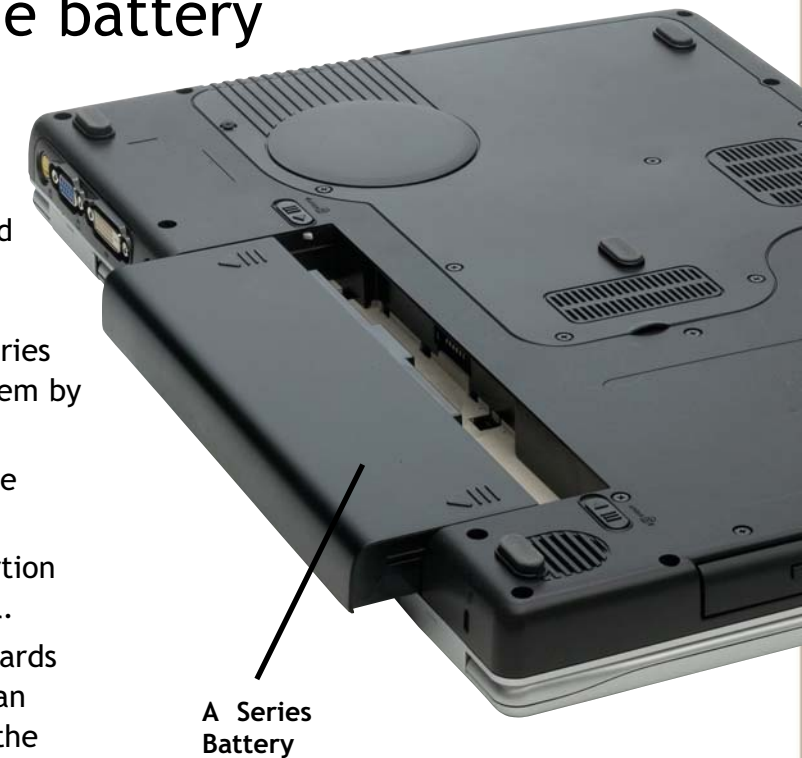


3 Connect the AC Adapter

The first time you use your WinBook notebook, use the AC power adapter to fully charge the battery.

 - Connect the power cable to the AC adapter.
- Connect the AC adapter to the DC-IN jack of the notebook.
- Connect the plug end of the power cable to an electrical outlet.

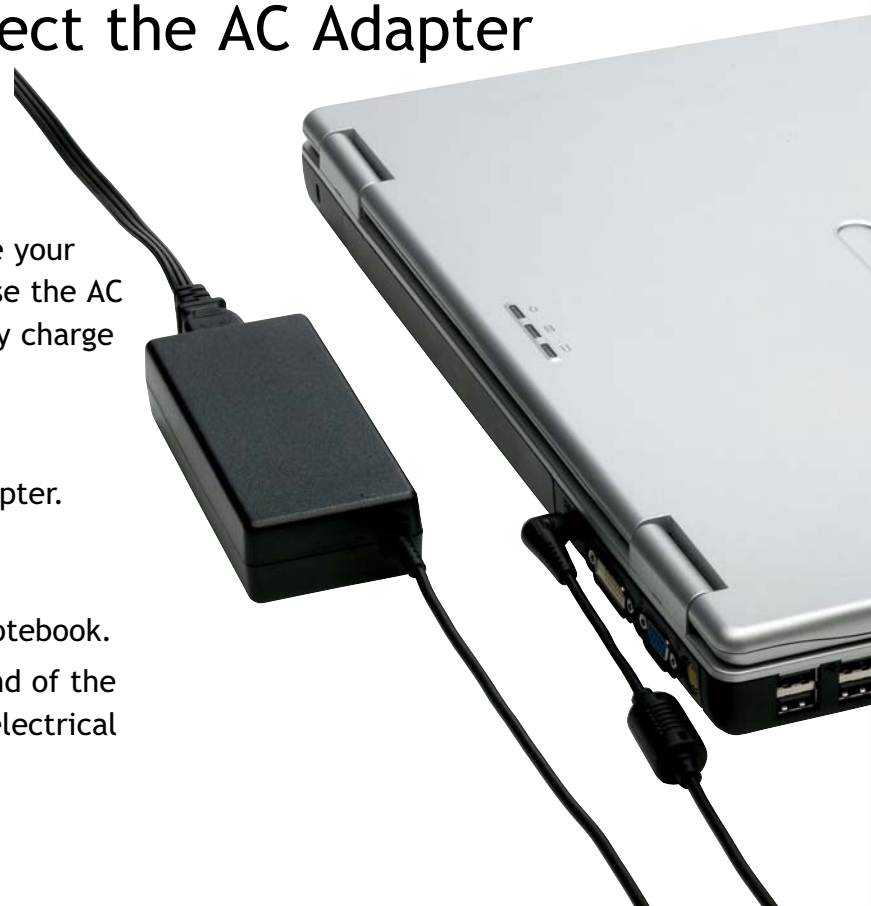

4 Open the display

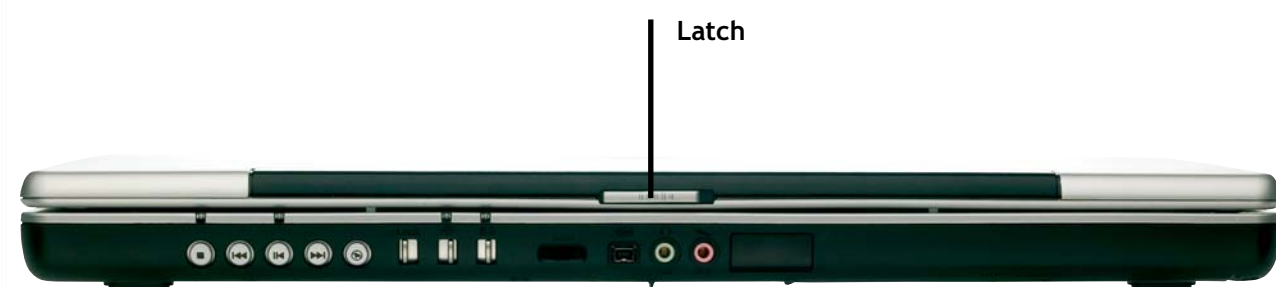 

- Locate the display latch on the front of the notebook.
- Slide the display latch to the right and raise the panel.
- Adjust the display to a comfortable viewing angle.

5 Power up and Windows setup

Power Button

Locate the power button above the keyboard. Press and hold the power button until the power light comes on.

Windows XP setup

 
Follow the screen prompts for setting up Windows XP.



6 Finding Help resources

For help with any questions about your WinBook notebook or Windows XP, refer to the Help and Support Center within Windows.

Additional assistance can be found at www.winbookcorp.com

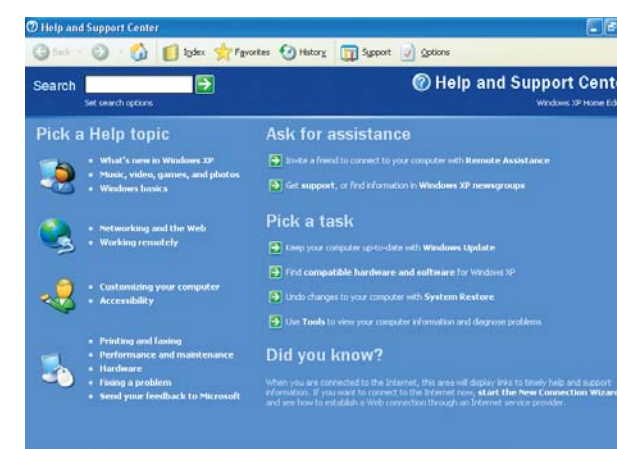

Using the Help and Support Center

Obtaining access to the Help and Support Center is just a key press or mouse click away. From the Windows desktop, press the [F1] key in order to bring up the Help and Support Center. Alternatively you can click once on the Start Menu and then select Help and Support.

- Do**
- Save this Quickstart Guide, all manuals, and any other software CDs for future reference. Save the carton and the packing materials in case you ever have to store or ship your system.
 - Use a quality, UL-approved surge protector or power strip to guard against power surges.

Don't • Don't supply power to the notebook until all cords are connected.

WARNING

Your WinBook notebook has been designed to be expandable. There are a number of components that can be installed by the user. Before opening the case, you should be aware that you can injure yourself and damage your computer if you do not perform the operations correctly. If you are not comfortable with upgrading components on your own, refer to the Help and Support Center or have a Service Technician perform upgrades for you.